


# CONNECTION - SCHEME

## - minikitchen and wall cupboards -

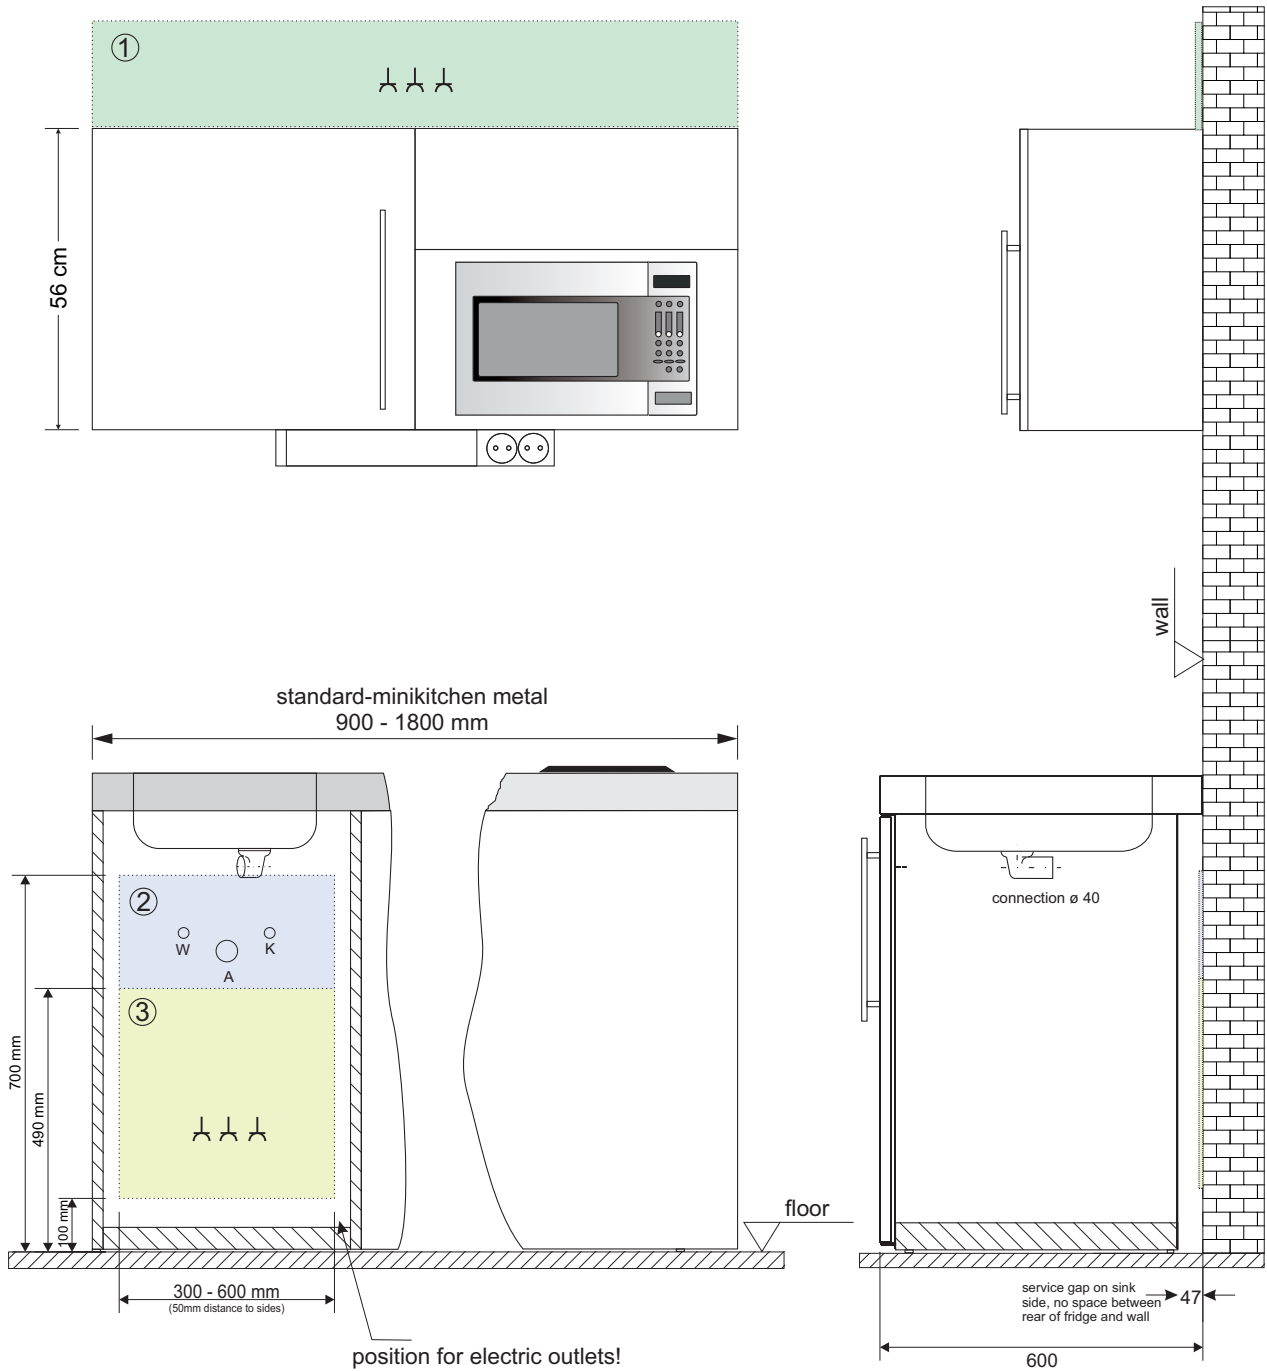

- ① recommended area for electrical connection wall cupboards (e.g. microwave, light, extractor hood, etc.)
- ② recommended area for water connection
- ③ recommended area for electrical connection minikitchen (e.g. fridge, microwave, dish-washer, oven, etc.)



**Important note !!!**  
Drawing: Right hand hobs and left hand bowl.  
Please check before installing which hob or bowl side you have and fix service connection accordingly.

**Complaints afterwards won't be accepted!**

We recommend installation by a qualified tradesperson.

### **Important note for the connection of the minikitchen:**

- cupboards of the minikitchen are delivered without cupboard backs
- number of connection dependant on number of electric appliances
- all appliances with 230V - plug
- power data see datasheet of the appliances or minikitchen catalog

### **Distances in the installation area:**

- wall - drawer	= 130 mm
- wall - dish-washer	= 65 mm
- wall - fridge Liebherr (MK / MP)	= 15-18 mm
- wall - fridge Stengel (ME)	= 50 mm
- wall - microwave	= 280 mm
- wall - oven	= 25 mm
- wall - shelf	= 50 mm

Errors excepted !